

**EPSON®**

**MM PROJECTOR**  
ULTI EDIA

**EMP-745**

**Read This First**

English

**À lire en premier**

Français

**Bitte zuerst lesen**

Deutsch

**Leggere attentamente prima di  
procedere**

Italiano

**Lea primero esto**

Español

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

**General Notice:**

EPSON is a registered trademark of SEIKO EPSON CORPORATION.

EasyMP is a trademark of SEIKO EPSON CORPORATION.

Macintosh, Mac, and iMac are registered trademarks of Apple Computer, Inc.

IBM is a registered trademark of International Business Machines Corporation.

Windows and Windows NT are registered trademarks of Microsoft Corporation in the United States of America.

Dolby is a trademark of Dolby Laboratories.

Cisco Systems is a registered trademark of Cisco Systems Inc. in the United States of America and other countries.

Pixelworks and DNX are trademarks of Pixelworks Inc.

Portions of this software are based in part on the work of the Independent JPEG Group.

Portions Copyright©2003 Instant802 Networks Inc. All rights reserved.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

This product uses open source software.

Acrobat Reader Copyright © 1987-2002 Adobe Systems Incorporated. All rights reserved. Adobe, the Adobe logo, Acrobat, and the Acrobat logo are trademarks of Adobe Systems Incorporated.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

Copyright © 2004 by SEIKO EPSON CORPORATION

# Read This First

Unpacking the Projector .....	2
Document Contents .....	3
Check the Steps for Using the Projector.....	4
Viewing the Contents of the Document CD-ROM .....	8

Before using this product, please be sure to:

## **1. Read this booklet.**

Check the components and the procedures for setting up the projector and carrying out projection.

## **2. Read the "Safety Instructions/World-Wide Warranty Terms".**

 
It contains important information on using the projector safely, and also includes the terms and conditions of the worldwide warranty. Be sure to read this booklet thoroughly before using the projector.

The most commonly used functions of the projector are covered in the *Quick Reference Guide*. Always keep this with the projector so that it can be referred to when needed.

See "Troubleshooting" in the *User's Guide* if there are problems such as no projection, poor image quality, etc.

# Unpacking the Projector

When you unpack the projector, make sure that you have all these components. If any of the components are missing or incorrect, please contact the supplier.

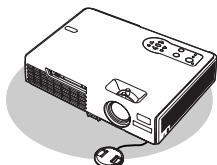

☐ **Projector**  
(With lens cover attached)



 
☐ **Remote control**




☐ **AAA alkali  
batteries**  
(2 pcs.)  
Insert into the remote  
control.




☐ **Wireless LAN card**  
(IEEE 802.11g/b compatible)  
Insert into the card slot of  
the projector when  
connecting to a computer  
via a wireless LAN.



 
☐ **Power cable**  
(1.8 m (6 ft.))  
Use to connect the  
projector to an  
electrical outlet.



 ☐ **Computer cable**  
(mini D-Sub 15-pin/  
mini D-Sub 15-pin,  
1.8 m (6 ft.))  
Use when projecting  
computer images.



 ☐ **Audio adapter**  
(3.5 mm dia. Stereo mini plug/  
RCA pin jack × 2 red/white, 20  
cm (7.9 inches))  
Connect this adapter with a  
commercially-available RCA  
audio cable to output sound of  
projector's built-in speaker.



☐ **USB cable**  
(1.8 m (6 ft.))  
Use when connecting to  
a computer with a USB  
port to use the wireless  
mouse function or to  
send data to the  
projector.



☐ **EasyMP Software**  
(CD-ROM 1 pc.)  
Use to install the EasyMP  
software into a computer.



☐ **Password Protect sticker**  
When Password Protect is enabled,  
attach this to somewhere on the  
projector where it is clearly visible to  
increase anti-theft effectiveness.



☐ **Soft carrying case**  
(with shoulder strap and handle)  
For carrying the projector.

## Documentation

- ☐ Read This First (this booklet)
- ☐ Safety Instructions/  
World-Wide Warranty Terms

- ☐ Document CD-ROM
- ☐ Quick Reference Guide
- ☐ EasyMP Network Setup Guide

# Document Contents

This projector is supplied with the following five manuals.

## EasyMP Network Setup Guide



Contains instructions on how to set up and connect the projector to a computer (using either a wireless LAN or a wired LAN).

## Quick Reference Guide



Contains basic information on using the projector. Leave this near the projector at all times so it is on hand for easy reference.

The following documents are contained in the Document CD-ROM.



## User's Guide (PDF)

This contains detailed information on all aspects of projector operation. Refer to this manual if you wish to know about a function in detail or if you have a problem with the projector.

## EasyMP Operation Guide (PDF)

This contains useful information on using the projector to give presentations via a network.

## EMP Monitor Operation Guide (PDF)

This contains information on how to monitor and control the projector via a network.



"Viewing the Contents of the Document CD-ROM" p.8

Be sure to read the manuals carefully in order to ensure safe and correct operation. Keep them in a safe place nearby where they will always be available for referring to in order to help solve any problems or questions you may have.

# Check the Steps for Using the Projector

This section provides a brief explanation of different setup procedures for different purposes and the manuals to be referred to in each case.

The following icons are used to indicate the various reference manuals.



Quick Reference Guide



User's Guide

 
 


EasyMP Operation Guide



EasyMP Network Setup Guide

## Using the connection cable to project computer or video images

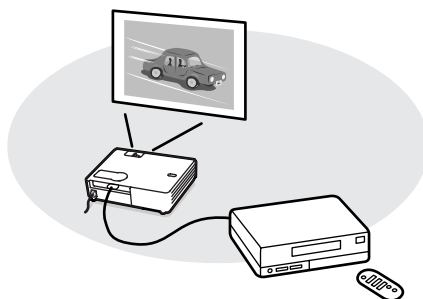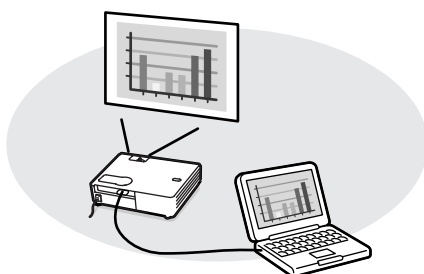

**1** Set up the projector



"Setup"

**2** Use the connection cable to:

- ▶ Connect to a computer
- ▶ Connect to a video source




"Connections"

**3** Turn the power on and project the images



"Projection Preparation and Adjustments"

# Projecting computer images (Easy connection using a wireless LAN)

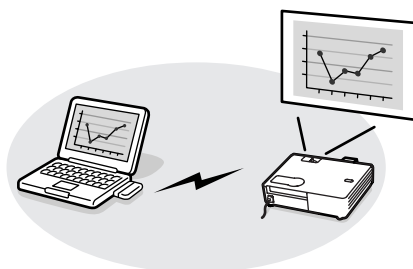 

## 1 Prepare the computer

- ▶ Install EMP NS Connection
- ▶ Insert the wireless LAN card\*
- ▶ Set up the wireless LAN



"Installing the EasyMP Software Into the Computer"

Computer documentation

\* This operation is not required if using the built-in wireless LAN function.



"Computer Wireless LAN Settings"

## 2 Prepare the projector

- ▶ Set up the projector
- ▶ Turn the power on
- ▶ Insert the wireless LAN card
- ▶ Set up the wireless LAN



"Setup"



"Projection Preparation and Adjustments"



"Inserting the Wireless LAN Card into the Projector"



"Connecting Using Easy Connect Mode (Wireless LAN)" - "Projector Network Settings"

## 3 Connect via the network



"Connecting the Computer and Projector via the Network"

## 4 Operations after connection

- ▶ Projected image operations
- ▶ Disconnecting

 


"Functions for Enhancing Projection"



"Disconnecting from a Network Connection"

Projecting movie files and digital camera photos

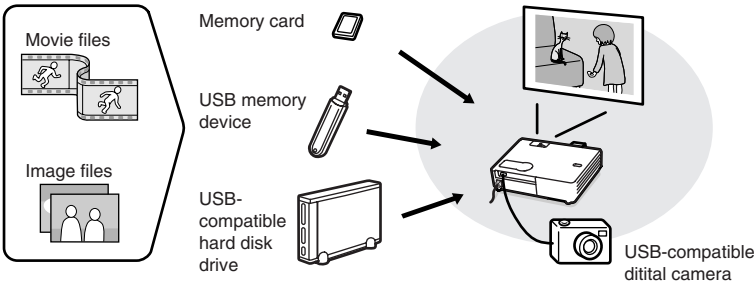

1

Set up the projector



"Setup"

2

Insert the memory card  
or  
connect the USB device



"Inserting and  
Removing Cards"



"Connecting USB Devices  
(Digital Camera, Hard Disk  
Drive or Memory Devices)"

3

Turn the power on and  
start projection



"Projection Preparation  
and Adjustments"

4


Project the movie files  
or images



"Playing Image and  
Movie Files"



## Giving presentations without using a computer

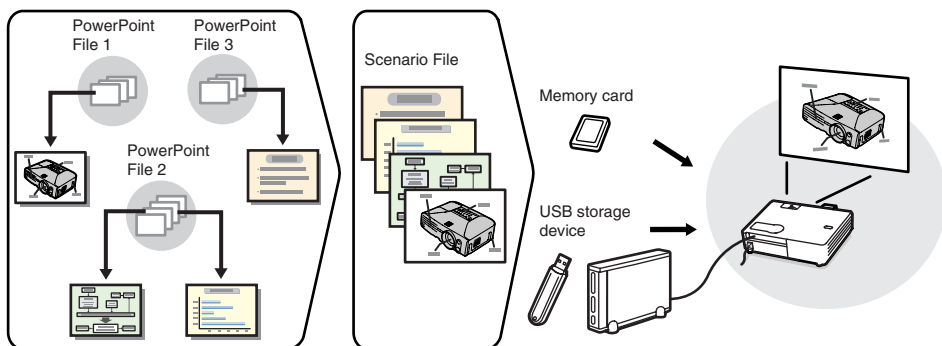 

1

Install EMP SlideMaker2



"Installing the EasyMP Software Into the Computer"

2

Create a scenario



"Creating a Scenario"

3

Prepare the projector

- ▶ Set up the projector
- ▶ Insert the memory card or connect the USB device
- ▶ Turn the power on and start projection



"Setup"



"Inserting and Removing Cards"



"Connecting USB Devices (Digital Camera, Hard Disk Drive or Memory Devices)"



"Projection Preparation and Adjustments"

4

Play back, manage and edit the scenario



"Projecting Scenarios"

# Viewing the Contents of the Document CD-ROM

## Tip :

The PDF manuals in the Document CD-ROM are version 1.3. Acrobat Reader version 4.0 or later, or Adobe Reader is required to view the PDF manuals. The Document CD-ROM contains Acrobat Reader 5.05 for Windows. If you need a different version of Acrobat Reader or Adobe Reader, visit the Adobe Systems website.

## 1 Turn on the power for the computer and insert the Document CD-ROM into the computer's CD-ROM drive.

### If using Windows

 
A page will be automatically displayed for you to select the model of projector you are using.

### If using a Macintosh

Double-click the "Launcher\_for\_OS86\_9x" or the "Launcher\_for\_OSX" file to display a page for selecting the model of projector you are using.

## 2 Click the model of projector you are using.

The following main page will be displayed.

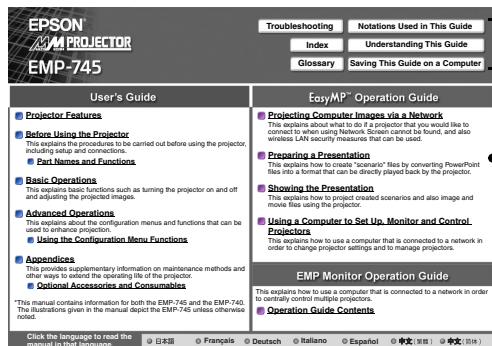

Read the "Notations Used in This Guide" and "Understanding This Guide" on the main page before looking in detail at the menu items.

When you move the mouse pointer over a menu item, the pointer will change to a hand icon. If you click a menu item, the details for that item will be displayed.

All of the manuals can be printed out as well as viewed on-screen. To print out a manual, display the required manual on the screen and then click the "Print" icon. Refer to "Saving This Guide on a Computer" for details about the "Print" icon.

## Tip :

When using Windows, a message will be displayed in case that Acrobat Reader is not already installed on the computer. Follow the instructions which are displayed on the screen to install Acrobat Reader. Once the installation has been completed, remove the Document CD-ROM from the computer's CD-ROM drive and then re-insert it to display the projector model selection page once more.